

LOTO Procedure for NWC Circuit Breakers

Work Performed by:

Low-Voltage Contractor and View Technician

Priority:

High

Affected Systems:

View Net

Implementation:

Immediate

Issue:

If the breaker for View Net 1-16 or View Net 17-32 (see Image #1), is powered ON before authentication services are brought online, the security certificates on the NWCs can be invalidated. Any impacted NWC must have the certificate reloaded.

Solution:

Zip tie a LOTO tag to each of the levers shown in Image #2. The LOTO tag can be installed by the low-voltage contractor or a View technician. Be sure to fill out the tag with technician name and phone number.

Caution: Only a View technician is authorized to remove these tags.

When to Energize NWC circuits:

Once the Control Panel and associated iNode is fully provisioned, the low-voltage contractor will contact View PM/FSE about removing tags and energizing the circuits.

To purchase tags online, [Click here for tags](#)
 Or, purchase at a local hardware store.
 Electricians on-site should have tags as part of their LOTO kit.

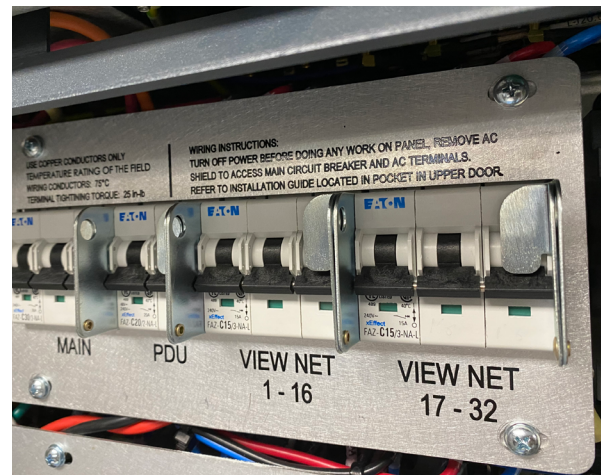


Image #1: Control Panel Circuit Breakers



Image #2: LOTO tags applied to VIEW NET 1 - 16 and VIEW NET 17 - 32