

OT DA


ΖI	Ν	G	
IG			

NOTES:		
1.	INSTALLER TO PROVIDE GROMMETS AT ALL FRAME PENETRATIONS WHERE POSSIBLE TO AVOID CABLE DAMAGE.	
2.	INSTALLER TO LABEL IGU CABLES WITH IGU NAME TO WHICH IT IS CONNECTED.	
3.	WHEN GLAZING POCKET CANNOT ACCOMMODATE IGU/SWC, INCORPORATE SERVICE LOOP INTO IGU CABLING. MAKE CONNECTION TO SWC AS YOU ARE GLAZING AND PUSH CONNECTOR THROUGH HOLE AND INTO MULLION.	

4. NO WIRE ROUTING IN SILL

SUGGESTED SMART WINDOW CONNECTOR (SWC) ORIENTATIONS -

> SUGGESTED IGU CABLE ROUTING \neg

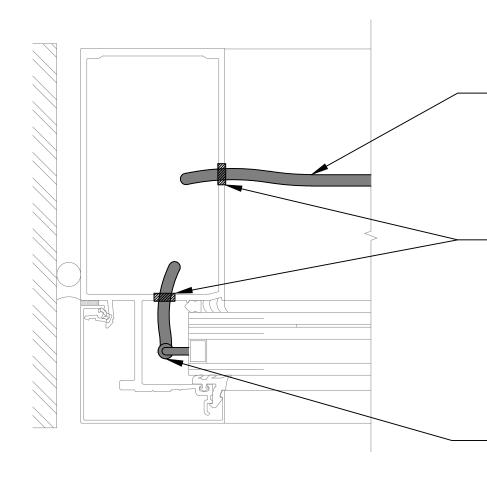

- CABLE FROM HORIZONTAL

- MIN. 7/16" DIA. HOLE FOR IGU CABLE TO FILE ALL EDGES SMOOTH. INSTALL SILICONE GROMMET, BACKFILL WITH SILICONE SEALANT.

- IGU CABLE CONNECTION TO IGU SWC IN GLAZING POCKET.

DETAIL 4 LEFT JAMB

