



OT DA


- NOTES: 1. INSTALLER TO PROVIDE GROMMETS AT ALL FRAME PENETRATIONS WHERE POSSIBLE TO AVOID CABLE DAMAGE. 2. INSTALLER TO LABEL IGU CABLES WITH IGU NAME TO WHICH IT IS
- WHEN GLAZING POCKET CANNOT ACCOMMODATE IGU/SWC, INCORPORATE SERVICE LOOP INTO IGU CABLING. MAKE CONNECTION TO SWC AS YOU ARE GLAZING AND PUSH CONNECTOR THROUGH HOLE AND INTO MULLION.
- 4. NO WIRE ROUTING IN SILL.

CONNECTED.

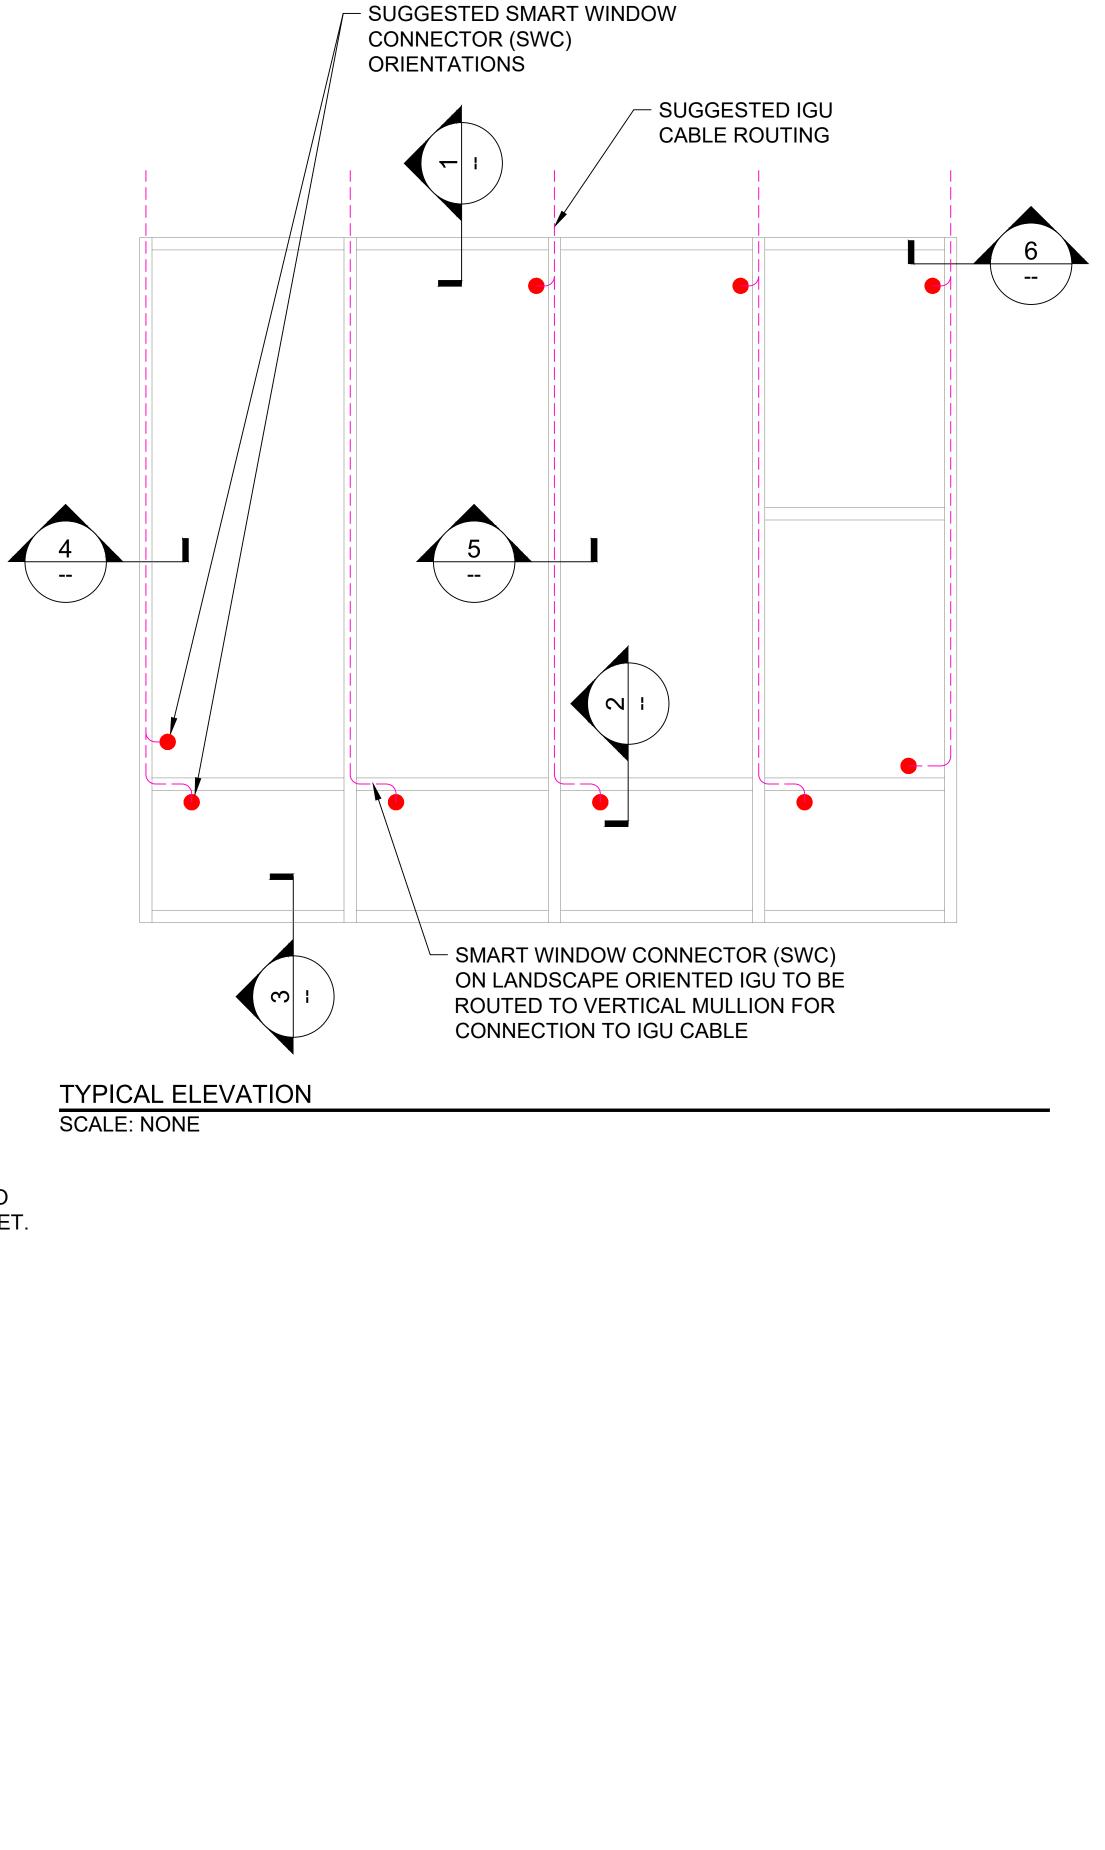


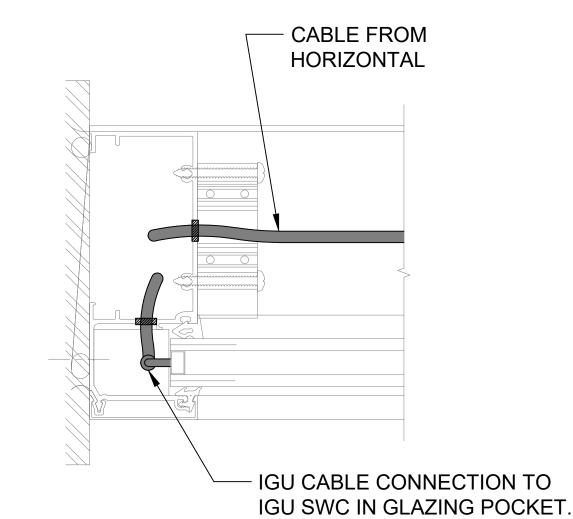

DETAIL 4 LEFT JAMB

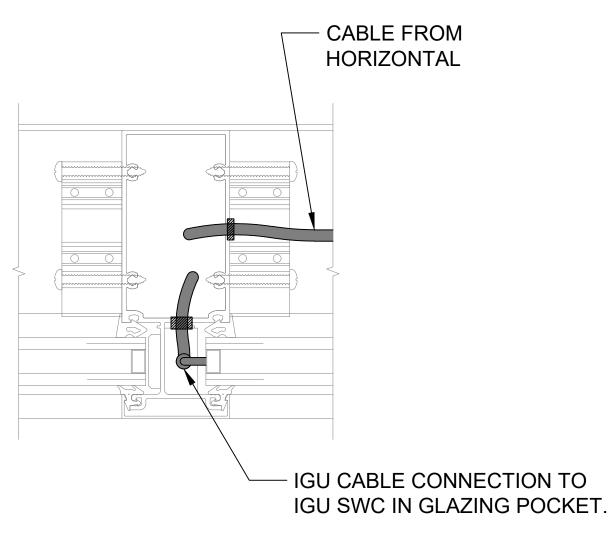

DETAIL 5 VERTICAL MULLION

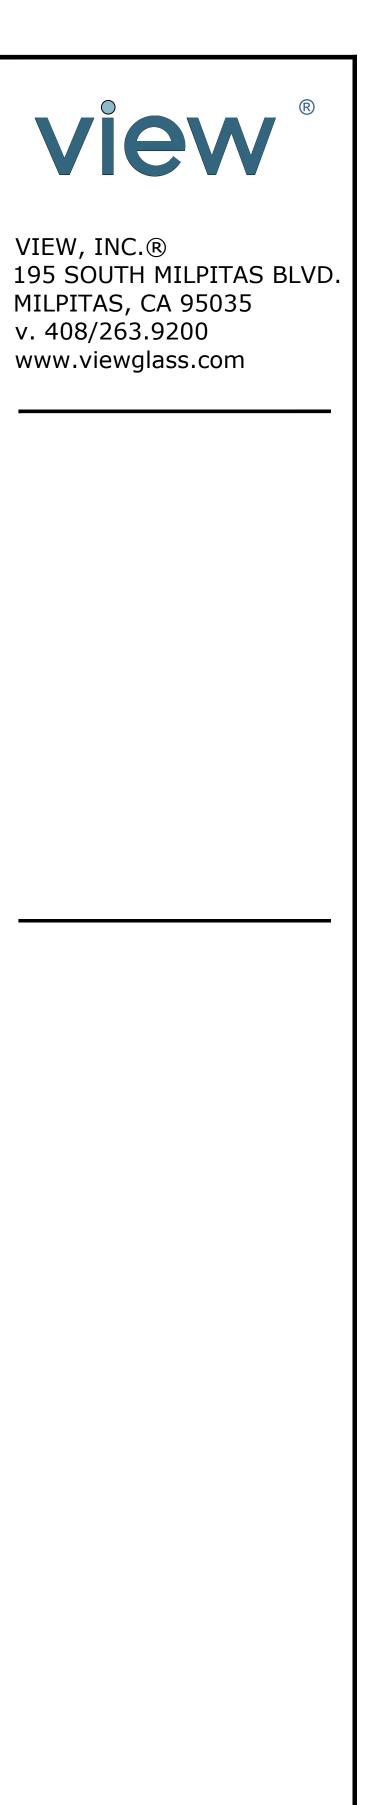

SCALE: 1:2